

IT IS IMPORTANT TO MAKE SURE THAT THE PIVOT PIN IS INSERTED WITH A SLIGHT PRESSURE IN THE NYLON PIVOT CUP.

LOOSEN THE PIVOT PIN NUT WITH A 13MM WRENCH.

UNSCREW OR SCREW THE PIVOT PIN WITH A 6 MM WRENCH.

MAKE SURE THAT THE PIVOT PIN IS INSERTED WITH A SLIGHT PRESSURE IN THE NYLON PIVOT CUP

LOCK THE PIVOT PIN NUT.

